

Look-In[®]
by LAMACOM

**MANUEL D'UTILISATION
APPAREIL A POPCORN ELECTRIQUE**


**INSTRUCTION MANUAL
*ELECTRICAL POPCORN MAKER***



SCHEMA ET DESCRIPTION DE L'ARTICLE

Composants de l'article

- 1) Cuillère doseuse
- 2) Couvercle
- 3) récipient maïs en aluminium
- 4) Bloc moteur
- 5) Interrupteur Marche/Arrêt

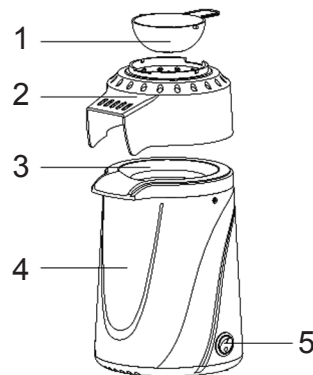

CARACTERISTIQUES TECHNIQUES

Tension / Fréquence : 220-240V ~ 1200W

CONSIGNES DE SECURITE

- Vérifier que la tension d'alimentation indiquée sur la plaque signalétique de l'appareil correspond bien à celle de votre installation électrique.
- Placer l'appareil hors atteinte des enfants
- Cet appareil ne doit pas être utilisé par des personnes handicapées ou ayant un manque d'expérience ou de connaissance de l'appareil, ou des enfants, mais seulement sous surveillance d'une personne responsable de leur sécurité.
- Placer l'appareil sur une surface plane et dure, loin de toutes sortes de chaleur.
- Débrancher l'appareil avant toute manipulation (montage et démontage des accessoires), après utilisation, avant le nettoyage et en cas de dysfonctionnement.
- Ne pas tirer le cordon d'alimentation pour débrancher l'appareil.

- 8- Turn off the Popcorn Maker and remove the mains plug from the mains supply when popping has stopped.
- 9- If more Popcorn is required, remove the Popcorn remaining in the Aluminium Heat Chamber. Pay attention not to get burnt when handling the Top Cover as this part as well as the Measuring Cup is very hot when the Popcorn Maker is functioning.

NOTE : Wait for approx. 10 to 12 minutes before using the Popcorn Maker again.

CARE AND CLEANING

- Before cleaning, remove the mains plug from the mains supply.
- Make sure the Popcorn Maker has cooled down completely before cleaning.
- Clean the plastic parts of the Popcorn maker with a damp cloth. Never use abrasive products as they could damage the Popcorn maker.
- The Top Cover and the Measuring Cup can be cleaned in warm soapy water.

- 8- Mettre l'interrupteur sur la position arrêt et débrancher l'appareil.
Attention, l'appareil est chaud, le manipuler avec précaution.
- 9- Après chaque utilisation, laisser l'appareil refroidir pendant au moins 10 minutes.
- NB : Il faut attendre 10 à 12 minutes avant d'utiliser l'appareil pour une 2ème fois.


CONSEILS D'ENTRETIEN

- Débrancher l'appareil et le laisser refroidir
- Nettoyer le couvercle et la cuillère doseuse avec de l'eau savonneuse, rincer et essuyer.
- Nettoyer le corps de l'appareil et le compartiment de maïs à l'aide d'un chiffon doux et humide.
- Ne pas plonger l'appareil dans de l'eau ou d'autre liquide.

PRODUCT DESCRIPTION AND SKETCH

Composants de l'article

- 1) Measuring cup
- 2) Top cover
- 3) Corn inlet
- 4) Body
- 5) On/Off switch button

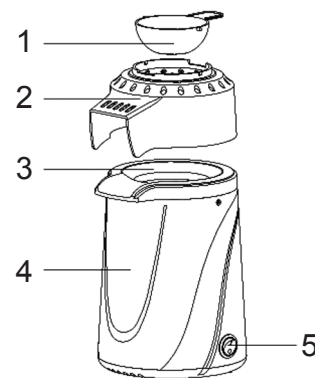

TECHNICAL CHARACTERISTICS

Tension / Frequency : 220-240V ~ 1200W

IMPORTANT SAFEGUARDS

- Before using the appliance for the first time, make sure that the mains voltage in your home corresponds to that indicated for the sweeper.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Place the Popcorn Maker on a level surface.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not let cord hang over edge of table or counter, or touch hot surfaces instead grasp the plug and pull to disconnect.
- To protect against electric shock do not immerse cord, plugs in water or others.
- Do not operate the appliance with wet hands.
- Do not use outdoors.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries
- Do not operate the appliance without top cover and measuring cup.
- Measure Popcorn using the Measuring Cup provided. One full measure per session is enough. More than one full measure could overfill the Popcorn Maker and disturb the proper functioning of the Popcorn Maker.
- Never put the butter into the Aluminum Heat Chamber.
- Wait for approx. 10 to 12 minutes before using the Popcorn Maker again.
- Do not use appliance for other than intended use.
- Do not operate the appliance with a damaged or defective supply cord.

...HOW TO USE

- 1- Place the Popcorn Maker on a level surface.
- 2- Disconnect the appliance.
- 3- Before first use, it is recommended to wipe the Popcorn Maker and accessories with a damp cloth.
- 4- Measure Popcorn using the Measuring Cup provided. One full measure per session is enough. More than one full measure could overfill the Popcorn Maker and disturb the proper functioning of the Popcorn Maker.
- 5- Pour the Popcorn into the Aluminum Heat Chamber. Replace the Measuring Cup into position inside the Top Cover after every use.
- 6- Place a large bowl under the Spout so that the edge of the bowl is touching the body of the Popcorn Maker.
- 7- Switch On the Popcorn Maker. After a few moments the continuous popping action will automatically feed Popcorn from the Aluminium Heat Chamber out through the Spout until all has popped.

- Eloigner le cordon d'alimentation des sources de chaleur et des enfants.
- Ne jamais mettre le corps de l'appareil dans l'eau ni sous l'eau courante.
- Ne jamais laisser l'appareil sans surveillance pendant l'utilisation.
- Ne pas manipuler l'appareil avec les mains mouillées.
- Ne pas laisser l'appareil exposé aux agents atmosphériques (soleil, pluie...)
- Pour ne pas endommager l'appareil n'utiliser que les accessoires fournis avec l'appareil.
- Ne jamais utiliser l'appareil sans couvercle et la cuillère doseuse.
- Ne jamais dépasser la dose d'une cuillère doseuse de maïs.
- Utiliser uniquement des maïs secs, ne jamais rajouter d'autres ingrédients (huile, beurre, sucre...).
- Après chaque utilisation, laisser l'appareil refroidir pendant au moins 10 min
- Cet appareil doit être utilisé uniquement pour usage domestique et non pas pour un usage autre que celui qui lui est destiné.
- Ne pas utiliser l'appareil si le cordon d'alimentation est endommagé.
- Toute erreur de branchement ou de manipulation annule la garantie.

CONSEILS DE MISE EN MARCHÉ ET D'UTILISATION

- 1- Placer l'appareil sur une surface plane et dure.
- 2 - Vérifier que l'appareil est débranché.
- 3 - Avant la première utilisation, nettoyer les accessoires à l'eau savonneuse, rincer et sécher, nettoyer le département de maïs en aluminium et le corp de l'appareil à l'aide d'un chiffon humide.
- 4 - Remplir le département en aluminium d'une cuillère doseuse de maïs ; Attention : Ne pas dépasser la dose, pour ne pas endommager l'appareil.
- 5 - Placer le couvercle sur l'appareil, ainsi que la cuillère doseuse sur le haut du couvercle.
- 6- Placer un récipient large sous le bec verseur pour recueillir le pop corn.
- 7- Brancher l'appareil, et mettre l'interrupteur sur la position marche, au bout de quelques instants, les grains de maïs vont commencer à être soufflés et expulsés par le bec verseur.